

INSTRUCTIONS BASED ON SPOUTS USED FOR FUEL APPLICATIONS. THESE INSTRUCTIONS ALSO APPLY TO WATER APPLICATIONS. THIS DOES NOT CONSTITUTE USE WHERE NOT ALLOWED BY LAW. CONSUMER IS RESPONSIBLE FOR ALL APPLICABLE STATE AND FEDERAL LAWS

WARNINGS

- Only for use on fuel containers manufactured prior to Jan, 1 2009.
- This product is not CARB compliant. Not for use in **CA, DC, DE, MA, MD, NH, NJ, NY, OH, and VA.**
- **WARNING: IMPROPER FIT OR USE MAY CAUSE FIRE-- DO NOT USE IF SPOUT DOES NOT FIT AND SEAL TO CONTAINER, DO NOT USE IF FLAME ARRESTOR IS MISSING OR BROKEN**
- **Before use, test flexibility of spout for defects by bending gently back and forth. Spout is made of plastic and is made to flex, not to be bent 90° or breakage may occur.**
- **After spout has been used, do not remove spout from base cap. Gasket is made to expand, removal and reinstallation may damage gasket and leaks may occur.**

INSTALLATION INSTRUCTIONS

- Kit contains 2 base caps with different thread designs. Test each cap and utilize the one that best fits your container. **If neither base fits, try using the original base cap with our spout, or see www.ezpourspout.com for alternative base caps and adapters.** (The black cap is fine thread and generally fits the Rubbermaid, Gott and Essence, and Blitz. The yellow cap is coarse thread and generally fits Midwest and Scepter) Wedco and later model Briggs use our Gray cap(available on our website at no charge)
- After use of this nozzle, **replace spout cap to seal container, and close vent if one is present.**

VENT INSTRUCTIONS

- To replace old vent, pry old vent out with a screwdriver and push new vent in. Keep vent closed when not in use.
- To install new vent, **make sure can is empty and dry inside**, drill a ½ hole in back topside of jug using a step drill bit, tapered reamer, paddle bit or wood speed bit (a metal or twist bit should **not be used** it will make an irregular hole) and push new vent in. (clean out jug to remove shavings)
- If vent requires sealer use "Seal all". **NEVER USE SILCONE RUBBER**

CAP STRAP AND EXTENSION INSTRUCTIONS

- To install cap holder, wrap strap around top spout corrugation, run one end through hole and tighten until secures over bumps, then push strap through cap hole from bottom.
- To extend spout, this requires two extendable spouts, regular or HI-FLO. Remove flame arrestor(screen) **only** from the spout to be used as the extension and screw on to the spout attached to the can. **DO NOT REMOVE FLAME ARRESTOR (screen) FROM SPOUT THAT IS ATTACHED TO CAN.**

For more information contact us at www.ezpourspout.com

INSTRUCTIONS BASED ON SPOUTS USED FOR FUEL APPLICATIONS. THESE INSTRUCTIONS ALSO APPLY TO WATER APPLICATIONS. THIS DOES NOT CONSTITUTE USE WHERE NOT ALLOWED BY LAW. CONSUMER IS RESPONSIBLE FOR ALL APPLICABLE STATE AND FEDERAL LAWS